

## Premium Healthcare Showers




# Healthcare Showers

Shower systems for healthcare applications usually require the installation of height adjustable handheld showers which cater for both the able bodied and those who use a shower chair when bathing. There must also be provisions for assistance where someone is incapable of performing the cleaning task unaided.

Handheld showers for these applications should be lightweight, hard wearing, easily held in soapy hands and feature a soft spray pattern that will not irritate sensitive skin. Hoses should also feature a smooth, non-abrasive surface to allow thorough cleaning. Con-Serv's handheld showers and hoses meet these requirements.

All Con-Serv handheld showers are fitted with licenced dual check/non-return valves and are WELS 3-Star 9L/min or 4-Star 6.5L/min.

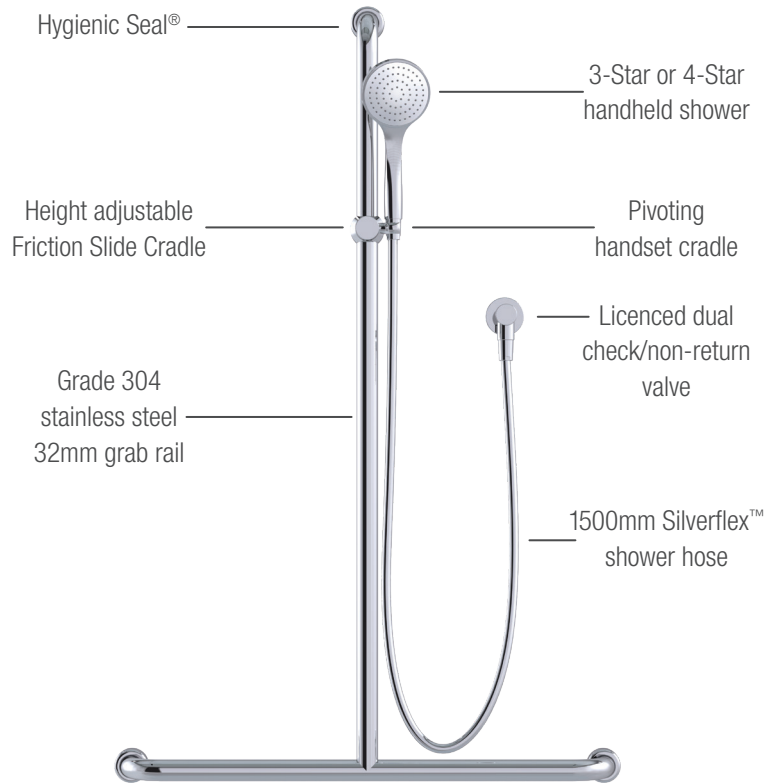

## Hygienic Seal® Grab Rails


When health and hygiene matter most, Con-Serv's own Hygienic Seal® grab rails lead the healthcare industry with effective and lasting Biomaster antimicrobial protection. The innovative cove designed Thermoplastic Elastomer (TPE) fitted flange seal firms to the rail wall and provides superior protection against grime and harmful build up behind the flange covers.

Hygienic Seal® grab rails feature:

- 32mm x 1.2mm grade 304 (18/8) stainless steel grab rail
- 50mm, 3 part machined brass screw-on flange cover
- Complies with AS 1428.1:2021 for Design and Construction
- Quality brass fixings with stainless steel screws included

The advantages of using Hygienic Seal® grab rails include:

- Unique Hygienic Seal® system that prevents grime build up
- Biomaster antimicrobial TPE fitted flange seals
- Smaller, compact flange cover
- Solid brass wall mount and lock nut
- Solid brass screw on flange cover
- Available in a large range of sizes and finishes

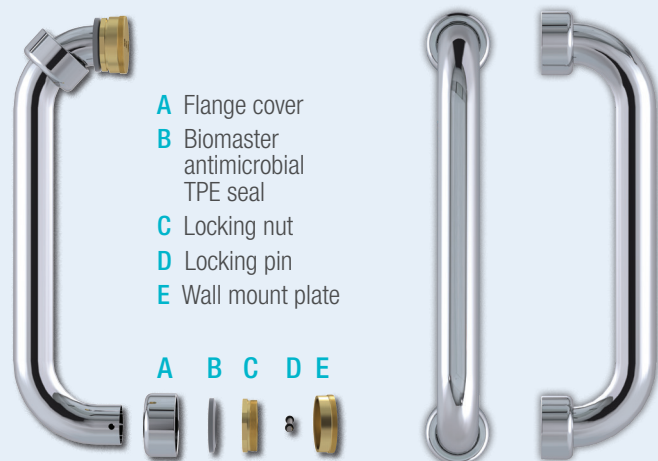

## Friction Slide Cradle

The Con-Serv brass Friction Slide Cradle (HC 932 C) is specifically designed for people with weakened or arthritic grip. Whilst generic handset cradles use a push button design, there is nothing to press, undo or tighten to move this slider up or down the grab rail, the user simply moves it into position. Those with weakened or arthritic grip can easily shift the position with the side of their hand.

The cradle pivoting C hook allows for easy positioning of the showerhead and can be adjusted to meet the user's needs.

The innovative design is extremely reliable and allows easy movement of the handset cradle up and down the grab rail. The Friction Slide Cradle is factory fitted, pre-tensioned, and arrives complete with your Con-Serv Premium Healthcare Shower.



Designed for users with weakened or arthritic grip



# Premium Healthcare Showers

Con-Serv's Premium collection of Healthcare Showers combine our Hygienic Seal® grab rail and Friction Slide Cradle technology provides users with both support and functionality.

## Features

- Grade 304 (18/8) stainless steel 32mm rail
- Hygienic Seal® 50mm brass screw on flange covers with Biomaster Antimicrobial Thermoplastic Elastomer (TPE) fitted seals
- Brass friction slide cradle for handset support and height adjustment
- Licenced dual check/non-return valve
- PVC 1500mm Silverflex™ hose with ½" BSP swivel conical end nut
- DR brass wall outlet elbow with flow Interchange® spigot
- Brass 57mm wall flange
- Suitable for Accessible applications
- Polish Supreme™ finish

## Compliance

- Meets the requirements of Section 14 of AS 1428.1:2021 for design and construction of grab rails
- Meets the requirements of Section 12 of AS 1428.1:2021 for showers
- Watermark AS/NZS 3662 WMKT 21147
- 3 Star 9L/min as per WELS licence number 0046
- Streamjet™ handpiece also available in 4 Star 6.5L/min as per WELS licence number 0046

## Optional Handpieces

Mix and match with any Con-Serv handpiece for a custom shower that meets individuals needs.



**HF 900T C** - Premium Healthcare Shower with Streamjet™ Turbo Pulsator handpiece, 900mm Hygienic Seal® grab rail



**HF 071J C** - Premium Healthcare Shower with Streamjet™ handpiece, 1100mm x 700mm inverted "T" grab rail

**Suitable for Accessible applications**

Available in left, middle fixed or right hand configurations

*Shown with Streamjet™ handpiece.*



**HF 711J C** - Premium Healthcare Shower with Streamjet™ handpiece, 760mm x 1000mm x 1100mm corner grab rail

**Available in left or right hand configurations**

*Shown with Streamjet™ handpiece.*





## Our Promise

Con-Serv Corporation Australia Pty Ltd warrants all of its products with a Limited Lifetime Warranty on all mechanical parts from manufacturing defects in materials and workmanship under normal use in a domestic installation for as long as the original purchaser owns their home into which the particular product(s) was/were installed. A five-year warranty will apply to commercial installations, irrespective of ownership. Con-Serv will repair or replace defective items correctly installed as per the Con-Serv installation instructions. Con-Serv will not be liable for defects arising through normal wear and tear. Item(s) must be returned with proof of purchase to Con-Serv at 17 Glentanna Street, Kedron, Queensland 4031. We will attend to your warranty claim after we make appropriate investigations. Contact our Service Manager during normal office hours on 1300 467 322 or at our email address of [warranty@con-serv.com.au](mailto:warranty@con-serv.com.au). If a warranty claim is accepted, Con-Serv will bear the reasonable costs of the return of the defective item(s) to us. A claim for expenses associated with making a claim for a defective product must be in writing and submitted to us with copies of supporting documents. The benefits given under our warranty are in addition to other rights and remedies of the customer under a law in relation to goods and services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or a refund for a major failure and compensation for any other reasonable, foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Visit the Con-Serv website [www.con-serv.com.au](http://www.con-serv.com.au) for the detailed warranty policy.